

# F-80Z FOGGER MANUAL INSTRUCTION

F-80Z FOGGER is one kind of our satisfactory and durable fog machine, which can be used in Disco Hall, Music Club and bar etc. to create special fantastic effects. For your using conveniently and freely, before operating it, please read this manual instruction carefully.

## I. Specifications:

Model No.	F-80Z
Rating Voltage:	240VAC/50Hz
Power consumption:	700Watts
Fuse:	250VAC/4A
Preheating Time:	4min
Fog Output:	2500 cuft / min
Tank capacity:	1 Liter
Measurement:	L325 x W 195 x H160 mm
Weight:	4Kgs

## II. Operation Directions

1. Remove all the packing before use, then clean the spray nozzle to be sure the nozzle without any hindrance. Please contact with your vendor if you find any destroy or omitting parts.
2. Place the machine horizontally and loose the cap of liquid tank to pour the high quality fog liquid.
3. Put the plug of control box into outlet marked "control input" on f-80 fogger rear panel.
4. connect the machine with the proper power supply (240V machine to 240V power) and ensure earthling wire safety to the ground. Push the switch on to lit the red LED to preheat it until the LED indicator on the line controller lits up.
5. Push up the button on the control box to spray when you need, and you can push it many times until the indicator lits off.

## III. Precautions

- 1.Indoor uses only, and prevent the fogger from the moisture and rains.
- 2.Place the fogger horizontally or hang it on from the ceiling but the bank angle less than 15° .
- 3.Ensure the space for enough ventilation, cooling and away from other objects 20 cm

at least.

4.Far away form any child.

5.Forbid the fogger closing up to any flame, flammable and explosive substance to avoid fire and explosive.

6.Forbid the spray nozzle toward any people, when spraying.

7.Forbid using it when liquid running up and pour high quality liquid immediately to avoid damaging the machine.

8.Pour liquid carefully to avoid the overflow liquid resulting in electrical shortcut.

9.Forbid pouring flammable liquids such as gas, perfume etc.

10.You shall switch off the fogger if you don't need it .If the fogger is in a stationary use, then you must install an additional switch, which switch off all pole of the power supply.

11.Only special Person can exchange the power cord.

## IV. Normal Exceptions and Maintenance

1.Unqualified fog liquid results in block or leakage .please choose high quality fog liquid.

2.Please clean the machine not more than 40 hours into the mix cleaner consist of 80% pure water and 20% vinegar as follows.

A. Before use, dismount and clean the nozzle with vinegar to ensure it without any remains.

B. Empty the tank, then pour clean liquid instead of fog liquid to spray until clean liquid runs off.

C. Assemble the nozzle and pour the fog liquid again for next operation.

3.Cut off the power when poor fog sprayed out or strong noise occurs, then check the remains of fog liquid, fuse, plug of control box and power plug carefully. If no exceptions turns on and push the button 30 seconds, no fog sprays also. Please contact with your vendor.

4.For long idleness, be sure to unplug the power.

## V. Others

1.Water drops always occurs on the nozzle of any fog machine because of air-cooled.

2.A little fog may spray during or after the operation.

3.Auto stop working under the temperature down to the certain point, and restart next preheating period until the temperature up to spraying point.